


AD-01

Slave PSTN Auto Dialer - Installation & Programming guide

Please read these instructions before you start the installation

Features

- LCD display
- Dual Triggers
- Programmable 9 x 32digit phone numbers for each trigger.
- Programmable as Silent Alarm (dial only) or Audible (siren + dialer)
- Cancel Message and Alarm at remote telephone using * Key or cancel message only using # Key
- 10 second duration recordable message for each trigger
- Built in memory for telephone numbers and programmed settings

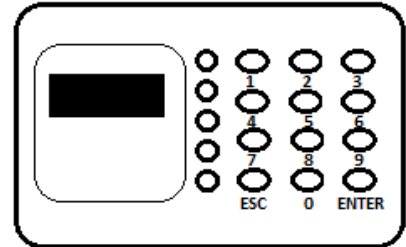

Contents

- 1 x Auto Dialer
- 1 x Telephone cable
- 1 x Fixing kit and Installation & Programming guide

Preparation

Tools required:

- Small cross head screw driver
- Large cross head screw driver
- Number 6 masonry drill bit
- Hammer drill
- Small hammer
- Pencil, ruler and spirit level

The Auto Dialer.

Important: before you install the Auto Dialer please take these into consideration.

1. Position the Auto Dialer near a phone socket.
2. Before you start to drill holes check for hidden wires and pipe work.
3. Keep the Auto Dialer out of reach of small children.

Installation

How to install the Auto Dialer

1. Remove the small screw from the battery compartment cover and keep safe.
2. Mark and drill two holes on a horizontal line 160 mm apart.
3. Insert the masonry plugs; screw the two fixing screws in the plugs leaving 2 mm protruding.
4. Run a cable from the Alarm Control Panel to the Auto Dialer.
5. Trigger 1 = alarm switched neg. and anti-tamper, switched neg.
6. Trigger 2 = alarm switched neg.
7. Tamp = Connect to N.C. (normally closed) tamper inputs of the Alarm Control Panel
8. Connect phone line from the LINE on the Auto Dialer to an existing Phone Socket, if this is in use you will have to purchase a double adaptor. If you want to plug into an existing Telephone you will have to purchase an RJ11 to RJ11 cable, connect one end into PHONE on the back of the Auto Dialer and the other into the Telephone.
9. Install 1 x 9V back up battery (if required) to the terminals, making sure they are the correct polarity. Usually, Back-up power would be supplied from the alarm panel battery to which the dialer is connected.
10. The auto Dialer will beep once.
11. Replace the battery compartment cover.
12. Connect the 12V power supply.
13. Place the Auto Dialer onto the wall, making sure the tamper switch is pressed in.
14. You can now start to program the Auto Dialer

How to make the Connections on the Auto Dialer.

The Trigger terminals are for connection to a switched negative output of an Alarm System's Bell or Siren (Fig 1 below). If such switched negative triggers are not available, connect the trigger inputs to a N.O. (normally open) relay output with the relay common to OV (Fig 2).

The Power terminals are for connection to a 12V power supply, either directly to an Alarm Control Panel's 12V supply or else via a 500mA mains power adaptor.

The Tamper terminals are for connection to the N.C. (normally closed) tamper inputs on an Alarm Control Panel. If they are not being used, please fit a loop of cable as shown

Fig 1


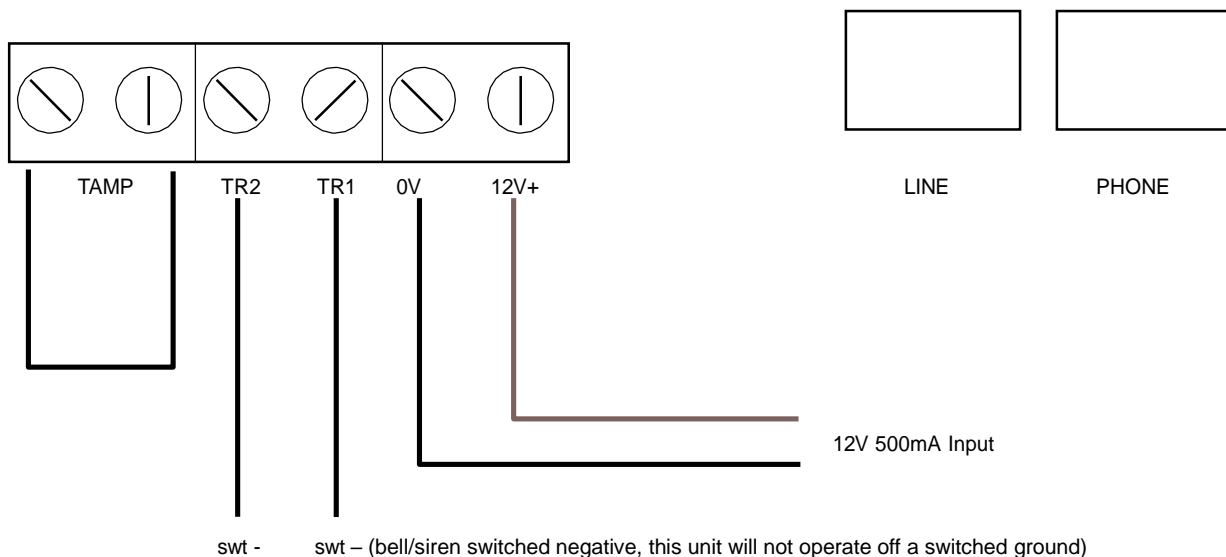


Fig 2

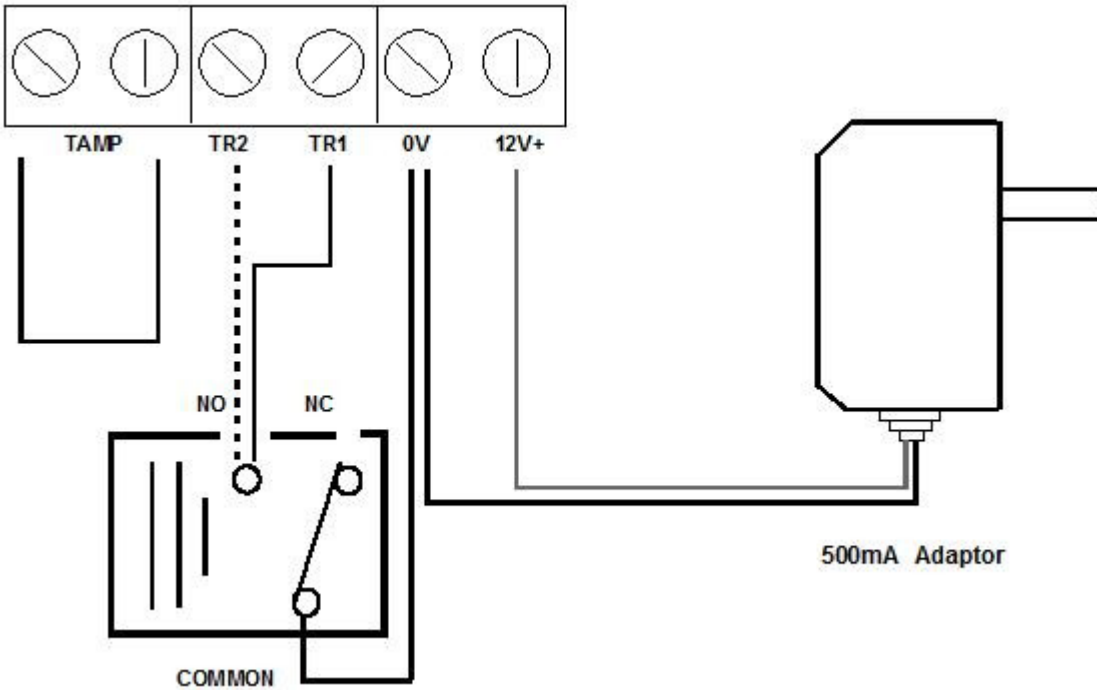

How to program the Auto Dialer

(If no key is pressed for 30 seconds, the Dialer will automatically exit the programming mode)

IMPORTANT: THE DIALER MUST BE IN THE OFF MODE FOR ALL PROGRAMMING. SINCE THE DIALER WILL AUTOMATICALLY TURN ITSELF ON WHEN POWER IS FIRST CONNECTED OR RECONNECTED, YOU NEED TO TURN THE DIALER OFF (ENTER CODE, DEFAULT 1234 AND THEN PRESS EXIT KEY) BEFORE YOU CAN START PROGRAMMING AS BELOW.

Programming Sections:

1. Select Audible or Silent Alarm on trigger (Default – Silent Alarm)
2. Duration of Audible Alarm on trigger (Default – 3 Minutes)
3. Add or Delete Phone Numbers that are dialed out on trigger (Default – Memory empty)
4. Select a Delay between Trigger and Dial out (Default – No delay, instant dial out)
5. Select a Delay between the Dialer being turned on/armed and becoming active (Default – No delay)
6. Assign the 9 dial-out Tel no's to trigger 1 and/or 2 (Default – All Tel no's assigned to both trigger 1 & 2)
7. Select an Audible Arm Delay sound (Default – No sound)
8. Select whether a Keystroke is Audible or Silent (Default – Audible)
- 8(6) Select whether the Dialer calls, in turn, each programmed dial-out number once or repeats the sequence two further times

Record. Record the two voice messages
Play. Play back the two voice messages
Password. Change the Default Password of 1234
Delete. Use to Delete Programmed Phone Numbers

NOTE: Only Programming Section 3, plus the Record, Play and Password Sections are essential to programme. For most applications, the other sections can be left in their default settings. Programming Section 6 can also be left in its default setting (activation of either trigger will mean ALL telephone numbers that have been programmed into the dialer are dialed) unless you need to send the Trigger 1 message to different phone numbers than those for Trigger 2.

NOTE: You must record at least One Voice Message and programme at least One Telephone number into section 6 for the Dialer to work.

Essential Programming Sections

How to Record the Voice Messages:

Quick guide: Press 1 2 3 4 > RECORD > 1 > ENTER > Record message now > ENTER.

- 1) Key in the four-digit user PASSWORD code (factory default 1234).
- 2) Press RECORD.
- 3) Press 1 (to record the message for Trigger 1) or 2 (to record the message for Trigger 2).
- 4) Press ENTER to start recording the message. You now have 10 seconds to record your message.
- 5) Press ENTER to stop the recording and save or wait for the 10 seconds to end.

How to Play Back the Voice Messages:

Quick guide: Press 1 2 3 4 > PLAY > 1 > ENTER to play back the recorded messages.

- 1) Key in the four-digit user PASSWORD code (factory default 1234).
- 2) Press PLAY.
- 3) Press 1 (to listen to the message recorded for Trigger 1) or 2 (to listen to the message for Trigger 2).
- 4) Press ENTER to start listening to the message.
- 5) Press ESC to stop listening at any time or wait until the messages stops playing.

How to Change the User Password: (factory default 1234)

Quick guide: Press 1234 > PASSWORD > New Code > Reconfirm New Code

1. Key in the four-digit user <PASSWORD> code. Factory default 1234.
2. Press PASSWORD.
3. The LCD will change to n-p.
4. Key in your new four-digit <PASSWORD> code.
5. The LCD will change to c-p.
6. Key in your new four-digit <PASSWORD> code again.
7. The LCD will change to acc.

How to Program Phone Numbers – Section 3:

You can enter a maximum of nine telephone numbers for the triggers, each number can be a maximum of 32 digits. Quick guide: Press 1 2 3 4 > PROGRAM > 3 > ENTER > 1 > ENTER > Telephone number > ENTER

1. Key in the four-digit user PASSWORD code (factory default 1234).
2. Press PROGRAM > 3 > ENTER > 1. The number you press after the ENTER button will select the position in the sequence you want that telephone number to dial (1=1st number called, 2= 2nd number called).
3. Press ENTER again and then Key in the first telephone number. Press ENTER to save and Programming mode is now exited.
4. Repeat the process until you have entered all the numbers you wish the Auto Dialer to call once it has been triggered (maximum 9 different numbers).

IMPORTANT: Enter the symbol * to create a “pause”. So, if you are using the AD-01 with an exchange line that requires a number (such as “9”) followed by a “pause” before dial-out, enter >9>*>Tel number

How to Delete Phone Numbers – Section 3 :

Quick guide: Press 1 2 3 4 > PROGRAM > 3 > ENTER > 1 > ENTER > DELETE> ENTER

1. Key in the four-digit user Password code (factory default 1234).
2. Press PROGRAM > 3 > ENTER. Select the position for the telephone number you want to delete (1=1st number called, 2= 2nd number called), press ENTER.
3. Press DELETE to delete that number.
4. Press ENTER to confirm your choice. Programming mode is now exited.

How to designate Telephone Numbers to TRIG 1 and TRIG 2 – Section 6:

Quick guide: Press 1 2 3 4 > PROGRAM > 6 > ENTER > X > ENTER > N > ENTER

- 1) Key in the four-digit user PASSWORD code (factory default 1234)
- 2) Press PROGRAM > 6 > ENTER.
- 3) Press 1 (for TRIG 1) or press 2 (for TRIG 2). Press ENTER
- 4) You will now see numbers 123456789 illuminated. This indicates that all 9 telephone numbers (or as many as have been programmed into the dialer) will be called on that trigger.
- 5) Press 1 - 9 to de-select that phone number from being dialed. You will now see a blank “-“ where that number was previously. Press ENTER to save the setting.
- 6) Repeat the process until you have designated all the numbers to each trigger. Remember that you can designate all 9 numbers to each trigger or only some to one and some to the other.

IMPORTANT: The numbers shown on the LCD display are the phone numbers assigned to that trigger. Pressing buttons 1 to 9 will toggle the numbers on/off on 1-9 respectively. If a number is not shown, then it means that it will not be called.

Example: 123—67-9 means that telephone numbers 1,2,3,6,7 and 9 only will be dialed for that particular trigger.

Other Programming Sections

How to Program the Auto Dialer to give a local Audible Alarm as well as sending a voice message – Section 1:

(Default setting is alarm OFF)

Quick guide: Press 1234 > PROGRAM > 1 > ENTER > 1 > ENTER (1=Audible, 0=Silent)

1. Key in the four-digit user <PASSWORD> code. (Factory default 1234).
2. Press PROGRAM > 1 >

ENTER > Display will show

Alarm Sound Silent

Press 1 to Change to Audible, Press 0 to return to Silent. Press ENTER to save your selection

How to Set the Time the Audible local Alarm will sound on activation – Section 2 : (Default time is 3 mins)

Quick guide: Press 1 2 3 4 > PROGRAM > 2 > ENTER > Time > ENTER (Alarm sound time is from 1M-99M.)

1. Key in the four-digit user <PASSWORD> code. (Factory default 1234).
2. Press PROGRAM > 2 >

ENTER > Display will show

Alarm Time 3 Minutes

Press digits 1-9 to set the time in minutes between 1-99 that you wish the alarm to sound on activation. We recommend that you do not exceed a 20-min alarm duration. Press ENTER to save your selection.

How to set Trigger Delay Delay times– Section 4: (Default is 0 seconds - instant)

Set trigger delay time between 0, 30 and 60 seconds: As a false alarm prevention feature, this is the delay between a trigger being activated and when the dialer starts to dial out. Default setting is 0 secs.

Quick guide: Press 1 2 3 4 > PROGRAM > 4 > ENTER > N > ENTER (N=0 or 3 or 6)

1. Key in the four-digit user <PASSWORD> code. (Factory default 1234).
2. Press PROGRAM > 4 > ENTER

> Display will show

Trigger Delay Instant

Press 3 to Change to 30 seconds, Press 6 to change to 60 seconds, Press 0 to return to Instant
Press ENTER to save your selection

How to set Arm Delay times – Section 5: (Default set at 0 seconds, instant)

Set arm delay time between 0, 30 and 60 and 90 seconds: This is the delay between the dialer being armed or primed and the time the triggers are active or ON. Default setting is 0 seconds, or no arm delay. Note that if an arm delay time is programmed, then the ON symbol on the LCD display will flash throughout the programmed time delay period.

Quick Guide Press 1 2 3 4 > PROGRAM > 5 > ENTER > N > ENTER (N=0 or 3 or 6)

1. Key in the four-digit user <PASSWORD> code. (Factory default 1234).
2. Press PROGRAM > 1 > ENTER >

Display will show

Exit Delay
Instant

Press 3 to Change to 30 seconds, Press 6 to change to 60 seconds, Press 0 to return to Instant
Press ENTER to save your selection

How to set an Arm Delay Sound– Section 7: (Default setting without sound)

Quick guide: Press 1 2 3 4 > PROGRAM > 7 > ENTER > 1 > ENTER (1=Audible, 0=Silent)

1. Key in the four-digit user <PASSWORD> code. (Factory default 1234).
2. Press PROGRAM > 7 > ENTER >

Display will show

Exit Delay Sound
Silent

Press 1 to Change to Audible, Press 0 to return to Silent
Press ENTER to save your selection

How to select whether a Keystroke is Audible or Silent– Section 8: (Default is Audible)

An Audible Keystroke means you will hear a “beep” each time to press a key on the keypad during programming etc.

Quick guide: Press 1234 > PROGRAM > 8 > ENTER > 4 > ENTER (0= Silent, 1= Audible)

1. Key in the four-digit user <PASSWORD> code. (Factory default 1234).
2. Press PROGRAM > 8 > ENTER >4> ENTER

Display will show

Key Sound
Audible

Press 0 to select a Keystroke as Silent, Press 1 to return to an Audible Keystroke.
Press ENTER to save your selection.

How to select whether the Dialer calls, in turn, each programmed dial-out number once or repeats the sequence 2 further times– Section 8 (subsection 6): (Default is once only – no repeat)

Quick guide: Press 1234 > PROGRAM > 8 > ENTER > 6 > ENTER 1 > ENTER (0= Once only, 1= Each number called separately in sequence 3 times)

1. Key in the four-digit user < PASSWORD > code (Factory Default 1234)
2. Press PROGRAM > 8 > ENTER > 6 ENTER

Display will show

Dial out Repeat
OFF

Press 1 to Program each Number to be called in Sequence. Press 0 to return to each number called only once
Press ENTER to save your selection

How to turn the Dialer On/Off locally or remotely

How to Turn the Auto Dialer ON : (Default On. That means the Dialer will always be active or ON when power is first applied or re-applied to it. Turn Off to programme and then turn back On and leave On)

Quick guide: Press 1 2 3 4 > ENTER

1. Check that the voice message and at least one phone number has been programmed into the Dialer.
2. Press 1 2 3 4 ENTER. The Dialer will show "ON" on the display.
3. The triggers will become active after the delay time you have set has expired. (Default set at 0 seconds, instant)

How to Turn Dialer OFF or to stop it dialing out after it has been triggered:

Quick guide: Press 1 2 3 4 > ESC

To turn the Auto Dialer OFF or to stop it from dialling out after either the tamper switch (if connected and active) or a trigger input has been activated, key in the <Password> following by ESC. The Auto Dialer will revert to the "OFF" mode and must be re-set to the "ON" mode as above.

How to stop the dialer dialing the telephone numbers in sequence:

Quick guide: When the phone is answered, press <#> or <*> on the telephone keypad to stop the dialing sequence.

When the Auto Dialer starts dialing, it will dial the first telephone number and repeat the pre-recorded voice message five times. If there is no response from the phone, then it will hang up and dial the next number until all the programmed numbers for that trigger are dialed. It will repeat this dial sequence three times and display "NO ANSWER" if there is no response from any of the phone numbers. To stop this dial sequence, press the <*> key on the telephone keypad that is receiving the call. At that time, the Auto Dialer will stop its dialing sequence and the alarm (if programmed) will stop. If the local alarm has been programmed as active, then pressing the <#> key will stop the dialing sequence, but the alarm will continue to sound until timed out. In both cases, the Dialer will remain ON, waiting for any further Trigger.

How to return the Auto Dialer to Factory Default Settings

(Note that this can only be done from the Dialer when the Dialer is in the OFF mode):

1. Ensure the Dialer is in the OFF mode.
2. Press 1234 > ESC > ENTER, The display will read "Factory Default" Press 1234 > ESC > ENTER again to confirm you wish to return to Factory Default Settings or ESC to keep existing settings and exit programming

Note of caution

1. A leaking battery will result in poor performance and could damage the system. It is recommended that the batteries be periodically checked. Change the battery at least once a year to maintain the system.
2. Do not mount the Auto Dialler in areas that are exposed to extreme heat or moisture, as this could adversely affect the performance of the system.
3. Use only a damp cloth and general household cleaning agent to wipe the unit clean. Do not use turpentine, thinner, gasoline or similar substances to clean the unit.

Trouble Shooting

Q: I have connected the Dialer to an Alarm Panel. The panel has activated, but there is no image appearing on the Dialer's LCD display and it is not dialing out.

A: Check the following carefully.

- i) Does the Dialer have a 12V supply – either from the panel or via a 500ma 12V mains adaptor?
- ii) Have you made the correct connections to the Trigger 1 and 2 inputs (either switched negative or relay)?
- iii) Is the Dialer On/Armed ? (If you have been programming, then it will have been in the Off mode and you will have to turn it back to On/Armed mode again). Enter your 4-digit code + Enter to turn ON/Arm.

Q: The Dialer's input has been activated correctly and the dial-out telephone number appears on the LCD display to indicate this. However, the voice message is not being received by the number it is meant to be dialing.

A: Check the following carefully.

- i) Have you activated the correct Dialer trigger? You may have programmed different numbers to call out for Trigger 1 and Trigger 2.
- ii) Have you entered the correct telephone number to call and/or entered a wrong digit by mistake?
- iii) If you think the Dialer should be calling a particular number, have you actually de-selected that number for that trigger by mistake? Go to Programming Section 6. To check the numbers that are being dialed in sequence for Trigger 1, press 1234 (code) > Program > 6 > Enter >1. You should now see various numbers between 1 and 0 illuminated. If a number is unlit, it means it is not being dialed for Trigger 1. Toggle numbers on/off by pressing that number on the keypad. A number must be lit in Section 6 if it is being dialed for that trigger.

Q: The Dialer's input has been activated correctly and the dial-out telephone number appears on the LCD display to indicate this. However, it is not then dialing out and an error message is appearing on the LCD display.

A: Check the following carefully.

- i) Have you recorded at least 1 message and programmed at least 1 telephone number to the Dialer?
- ii) Have you deleted a telephone number by mistake? Go to Programming Section 3. To check whether the 1st telephone number you think you have programmed in is in the Dialer's memory correctly, Press 1234 (code) > Program > 3 > Enter >1 > Enter. You should now see that telephone number. Press Enter again to Exit programming. If you don't see a telephone number there, enter the number again and press Enter to exit.
- iii) Have you de-selected a number to be dialed out in sequence for that trigger by mistake? Go to Programming Section 6. To check the numbers that are being dialed in sequence for Trigger 1, press 1234 (code) > Program > 6 > Enter >1. You should now see various numbers between 1 and 0 illuminated. If a number is unlit, it means it is not being dialed for Trigger 1. Toggle numbers on/off by pressing that number on the keypad. A number must be lit in Section 6 if it is being dialed for that trigger.

Q: I can't cancel the remote dial-out remotely by pressing, on the remote telephone hand-set either * (cancel dial out and alarm sound if programmed) or #' (cancel dial out only, alarm sound will continue until time out)

A: Have you waited until the message has ended? You cannot cancel until it has been played to you at least once.