

**Frequently Asked Questions:**

Q. What is the principle of Ultraviolet sterilization?

A. Ultraviolet light is a form of electromagnetic radiation that zaps the genetic material in what is known as “pathogens”, DNA in bacteria and fungi, RNA in viruses, preventing them from reproducing.

Q. Is an Ultraviolet Lamp effective?

A. The Technology behind UVC sterilization has been around for many years and is now widely used in healthcare facilities for disinfecting patient and operating rooms. The KE00200 Table lamp is ideally suited for household disinfection and sterilization, bringing the power of natural sunlight indoors.

Q. Is there anything I need to be careful about when using the Lamp?

A. While UVC light is natural and sterilizes bacteria and viruses, human eyes and skin should not be exposed for a long time. UVC is invisible and can irritate skin and eyes so it is important to only use the lamp in unoccupied rooms (free of animals as well). Once the disinfection process has been completed, it is then best to open a window to ventilate the room, exit the room, closing the door behind you and wait for a further few minutes before re-entering.

Q. How often should I use the Lamp?

A. Use once or twice a week for 20 to 30 minutes at a time.

Q. What area does the Lamp sterilize?

A. Approximately 40sq meters of open space or surfaces up to 1 meter away

Q. How long will the tube in the Lamp last?

A. Approx. 8000 hours

Q. There is occasionally a foreign body in the Lamp tube. Does this matter?

A. You may sometimes see small white particles inside the tube. These are mercury particles because the working principle of the lamp is to excite the mercury vapor inside the lamp's tube. There may also be a little precipitation in the lamp tube from time to time. Neither of these are a cause for concern.



**KE00200 ULTRAVIOLET  
STERILIZATION LAMP**

**OPERATING INSTRUCTIONS**

**IMPORTANT:** When this product is used, neither people nor animals should be present in the room other than for a brief period. **NEVER** look directly at the Lamp's Tube.



- Never look directly at the ultraviolet light source. Due to strong ultraviolet radiation exposure may cause skin erythema, eye conjunctiva irritation and fatigue, etc.

- Before using the Lamp, check that all its surfaces are clean from dust etc. Clean with an alcohol sponge to ensure optimal performance

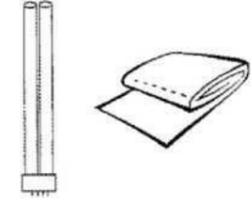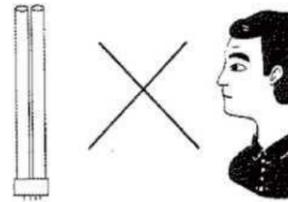


- Whilst using the Lamp, rooms should be kept clean, dry and clear of dust.

- The Lamp should be placed 1M away from any surface to effectively sterilize it. The Lamp will also sterilize approx. 40sq meters of open space

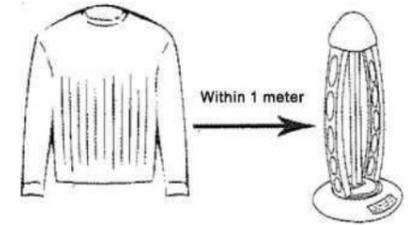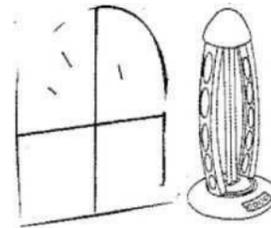


- Ensure all pets are removed from the room being sterilized.

- If there are paintings or plants in the area to be sterilized, please either cover them up or remove them temporarily from the room.

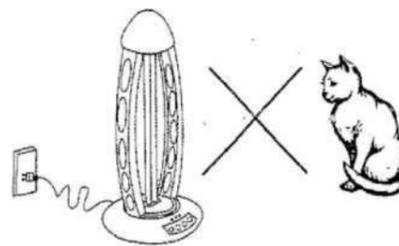

**Assembly Instructions**

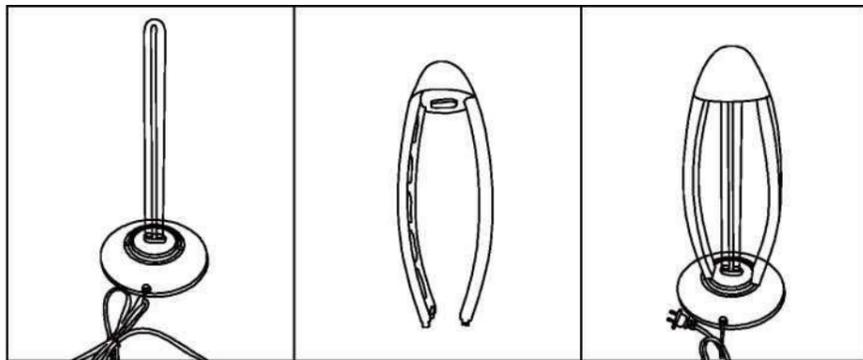

Step 1: Carefully Insert the lamp tube into the Lamp's Base

Step 2: Insert the 2 into the top cover.

Step 3: Attach the mounting bracket onto the base.

Product Reference Number	KE
Rated Power	38W
Rated Voltage	110/220V
Rated Frequency	50/60HZ
UV Wavelength	185 + 254 nm
Product Size	210mm*110mm*460mm
Timer Operation ON Time	15, 30 or 60 mins
Range of Remote Control	Up to 30 Meters
15 Mins Sterilization Mode	Suitable for disinfecting Toilets, Bathrooms and other small spaces
30 Mins Sterilization Mode	Suitable for disinfecting up to 40m <sup>2</sup> - Quick Disinfection
60 Mins Sterilization Mode	Suitable for disinfecting up to 40m <sup>2</sup> - A More Thorough Disinfection

**Operating Instructions**

1. Connect the Lamp to the Mains Power Supply
2. If you wish to turn the Lamp On for a personalized time period, press the ON/OFF key (top left) once. This will turn the Lamp on and start the Sterilization process until such time as you press the ON/OFF key again to turn the Lamp off.
3. If you wish to turn the Lamp On/Off for one of the following fixed time periods, simply press one of the 3 time keys of the remote control as required, 15 mins - top right, 30 mins – bottom left or 60 mins – bottom right.



The Lamp will turn OFF automatically at the end of the chosen time period.

If the disinfection process needs to be stopped earlier, simply press the ON/OFF key on the remote control