


KE00100 Foldable UV Light Wand

Instruction Manual

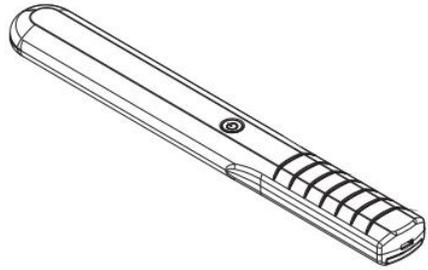

1. Safety Notice

To ensure safe and proper use of this product, please read this instruction manual carefully before initial use.



1. Do not drop the device.
2. Keep the device away from water or any type of liquid.
3. Keep the device away from children and pets.
4. Use a soft dry and clean cloth to wipe the device.


IMPORTANT

1. Keep the device away from contact with one's eyes and skin.
2. Ensure that device is used only for its intended purpose: cleaning keyboards, tablet PCs, mobile phones, toilet seats, table-tops, doorknobs, kitchen utensils, cutting boards and other surfaces. Any other usage is NOT recommended by and may cause damage to the user or device.
3. Refrain from operating the device if it has malfunctioned or has been damaged.
4. Never use detergents, furniture polish, gasoline, or any other household cleaning product to clean any part of the device.

2. Effects of Sterilization


Through UV irradiation, the DNA structure of a single celled virus will be damaged. This will lead to the virus's immediate death or loss of reproductivity. UV light can destroy bacteria, fungi, virus and algae

3. Quick Overview

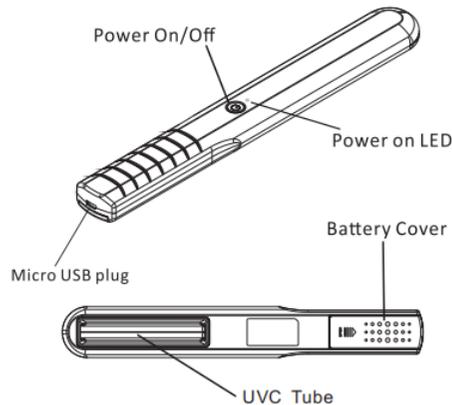


4. Battery Installation


Open the battery cover by pulling in the same direction as the arrows



Place 4 x AAA batteries (standard or rechargeable respecting polarity \oplus and \ominus)



If batteries are not installed, please use a micro USB lead to power the device.



IMPORTANT: If rechargeable batteries are used, they must be re-charged externally and CANNOT be recharged by the USB lead.


5. Operation



CAUTION:
Do not expose skin or eyes to the UV light
Do not recharge batteries via the USB lead

Powering ON/OFF

Press the Power ON/OFF button for 3 seconds and the LED light will turn green




Click the Power ON/OFF button briefly to turn off the power

6. Sterilization Method

CAUTION: Please prevent the UV tube from colliding or coming into contact with hard objects. Doing so will cause damage to the UV tube.

Hold the sterilizer in your hand with the light facing downward. Move the sterilizer slowly across the target surface for about 10-15 seconds or more.

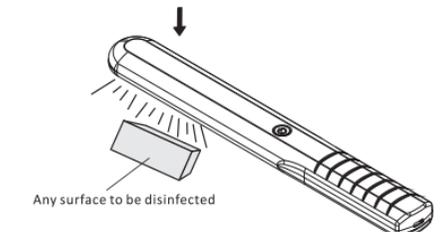

Lifetime	10000 hours
Power Supply	4 x AAA Batteries or USB Power Source
Rated Power	2W
Battery Life	1-2 Hours
Working Temp	0-60°C
Relative Humidity	10-75%
Dimensions	250 x 35 x 17mm